picture keeper®



Chromebook Instructions

Have Questions? Need help?

Visit us at **help.picturekeeper.com**
Email us at **support@picturekeeper.com**
Call us at **+1-877-382-0949** USA
or **+44-208-144-5940** UK/EU

Didn't purchase from picturekeeper.com?
That's OK. Please contact our U.S. support team directly for help with your product.

Google and Chromebook are either registered trademarks or trademarks of Google in the United States and/or other countries.

© 2023 Simplified IT Products, LLC
To access our Limited Warranty or End-User License Agreement visit **picturekeeper.com/warranty** and **picturekeeper.com/user-agreement**


Chromebook Quick Start Guide

1. **Download the *Picture Keeper Chromebook* app from the Google Play Store.**
2. **Plug the Picture Keeper into your Chromebook.**
3. **Sign in or *Create an Account.*** If this is your first time using Picture Keeper Chromebook, you will need to create an account within the app.
4. **Follow the on-screen prompts to grant access to your drive.** If no prompts are shown, you may need to grant access manually using the steps on the next page.
5. **Press *Start Backup.*** Grant any permissions requested by the app.


   Or tap **Show Backup Options** to customize your backup. If you use Google Photos, use the **Connect to Google Photos** option to allow our app to backup those photos too!

Manually Granting Access to your Picture Keeper


1. Click the time in the bottom right corner of your screen.
2. Click the Gear/Settings icon in the top right.

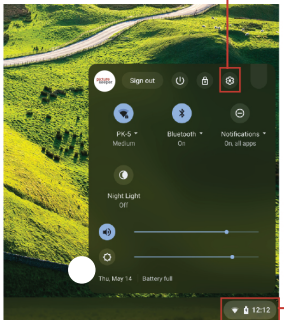

3. Click the **Device tab** in the left-side menu.

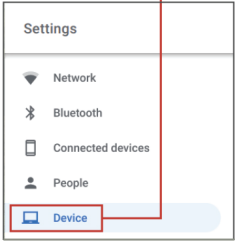


4. Click the option **Storage Management.**

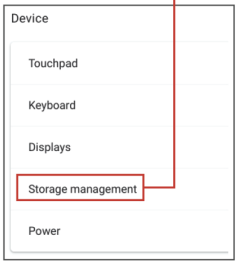

5. Click **External Storage Preferences.**



6. Under **Available Devices**, look for **PK**. Toggle the switch to the right. It should now appear **BLUE**.

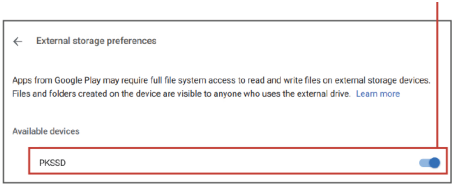

You are now ready to use your Picture Keeper Drive!
Re-open the app to start protecting your precious memories.